


Instruction Manual

DIGITAL CAMERA

ADVENT

MP82

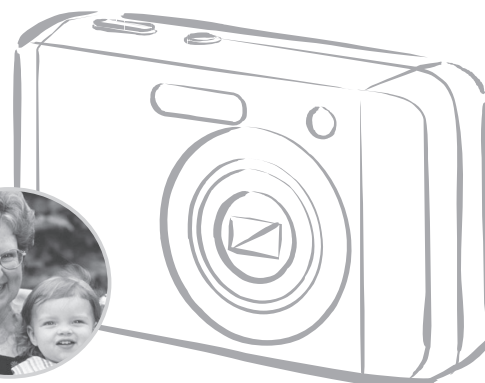GB



Precautions

- Before using the camera, please ensure that you read and understand the safety precautions described below. Always ensure that the camera is operated correctly.
- Do not aim the camera directly into the sun or other intense light sources which could damage your eyesight.
- Do not try to open the case of the camera or attempt to modify this camera in any way. High-voltage internal components create the risk of electric shock when exposed. Maintenance and repairs should be carried out only by authorized service providers.
- Do not fire the flash too close to the eyes of animals or people, especially for young children. Eye damage may result. In particular, remain at least one meter away from infants when using flash.
- Keep the camera away from water and other liquids. Do not use the camera with wet hands. Never use the camera in the rain or snow. Moisture creates the danger of electric shock.
- Keep the camera and its accessories out of the reach of children and animals to prevent accidents or damage to the camera.
- If you notice smoke or a strange odor coming from the camera, turn the power off immediately. Take the camera to the nearest authorized service center for repair. Never attempt to repair the camera on your own.
- Use only the recommended power accessories. Use of power sources not expressly recommended for this equipment may lead to overheating, distortion of the equipment, fire, electrical shock or other hazards.

-If you see this symbol-**Information on Disposal in other Countries outside the European Union**

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

**■ Care and Maintenance****• Care of the camera**

- **Do not strongly shake or bump the camera.** The camera may stop operating normally, pictures may not be recorded or the lens may be damaged.
- **Sand or dust may cause the camera to malfunction. Make sure that sand or dust does not get into the lens or the terminals when using the camera on a beach etc.**
- Make sure that water does not get into the camera when using it on a rainy day or on a beach.
- **If water or seawater splashes on the camera, use a dry cloth to wipe the camera body carefully.**

■ About the LCD monitor

- **Do not press the LCD monitor with excessive force. Uneven colours may appear on the LCD monitor and it may malfunction.**
- Condensation may form on the LCD monitor in places with large temperature differences. Wipe the condensation with a soft, dry cloth.
- If the camera is cold when you turn it on, the picture on the LCD monitor will be slightly darker than usual at first. However, the picture will return to normal brightness when the internal temperature of the camera increases.

Extremely high precision technology is employed to produce the LCD monitor screen. However there may be some dark or bright spots (red, blue or green) on the screen. This is not a malfunction. The LCD monitor screen has more than 99.99% effective pixels with a mere 0.01% of the pixels inactive or always lit. The spots will not be recorded on pictures on the built-in memory or a card.

■ About the Lens

- Do not press the lens with excessive force.
- Do not leave the camera with the lens facing the sun as it may cause the camera to malfunction. Also, be careful when you leave the camera outside or near a window.

■ About Condensation (When the lens is fogged up)

- Condensation occurs when the ambient temperature or humidity changes as described below. Be careful of condensation since it causes lens stains, fungus and camera malfunction.
 - When the camera is taken from the cold outdoors to the warm indoors.
 - When the camera is taken from outside to inside an air-conditioned car.
 - When cool wind from an air conditioner etc. blows directly on the camera.
 - In humid places.
- To prevent condensation, put the camera in a plastic bag until the temperature of the camera is close to the ambient temperature. If condensation occurs, turn the camera off and leave it for about 2 hours. The fog will disappear naturally when the temperature of the camera becomes close to the ambient temperature.

■ When not using the camera for a long period of time

- Store the battery in a cool and dry place with a relatively stable temperature.
[Recommended temperature: 15°C to 25°C,
Recommended humidity: 40% to 60%]
- Always remove the battery and the card from the camera.
- If the battery is left inserted in the camera, it will discharge even if the camera is turned off. If the battery continues to be left in the camera, it will discharge excessively and may become unusable even if charged.
- When storing the battery for a long period of time, we recommend charging it once a year. Remove the battery from the camera and store it again after it has completely discharged.
- We recommend storing the camera with a desiccant (silica gel) when you keep it in a closet or a cabinet.

Contents

<u>PRECAUTIONS</u>	<u>I</u>
---------------------------	-----------------

<u>CARE AND MAINTENANCE</u>	<u>II</u>
------------------------------------	------------------

<u>CONTENTS</u>	<u>IV</u>
------------------------	------------------

<u>GETTING STARTED</u>	<u>1</u>
-------------------------------	-----------------

USING THIS MENU	1
-----------------	---

UNPACKING	2
-----------	---

PARTS OF THE CAMERA	3
---------------------	---

INSERTING THE BATTERIES	5
-------------------------	---

LOW BATTERY INDICATOR	5
-----------------------	---

ABOUT BATTERY TYPE	5
--------------------	---

INSERTING THE MEMORY CARD	6
---------------------------	---

ABOUT CAMERA MEMORY	6
---------------------	---

DCF PROTOCOL	6
--------------	---

SETTING THE DISPLAY LANGUAGE / DATE & TIME	7
-----------------------------------------------	---

SETTING THE DISPLAY LANGUAGE	7
------------------------------	---

SETTING THE DATE & TIME	7
-------------------------	---

USING THE LCD MONITOR	9
-----------------------	---

REC MODE	9
----------	---

PLAYBACK MODE	10
---------------	----

CHANGING THE LCD STATUS	11
-------------------------	----

<u>BASIC OPERATION</u>	<u>12</u>
-------------------------------	------------------

TURNING THE POWER ON AND OFF	12
------------------------------	----

POWER SAVING FUNCTION	12
-----------------------	----

CHANGING THE MODE	13
-------------------	----

SWITCHING BETWEEN REC MODE AND PLAYBACK MODE	13
-------------------------------------------------	----

SELECTING THE REC MODE	13
------------------------	----

USING THE MENUS	15
-----------------	----

REC MENU	15
----------	----

SETUP MENU	16
------------	----

<u>BASIC RECORDING</u>	<u>19</u>
-------------------------------	------------------

RECORDING STILL IMAGES	19
-------------------------------	-----------

USING THE Q MODE	20
------------------	----

SETTING IMAGE SIZE AND QUALITY	21
--------------------------------	----

USING THE ZOOM FUNCTION	22
-------------------------	----

USING THE FLASH	23
-----------------	----

USING THE MACRO	24
-----------------	----

USING THE SELF-TIMER & BURST	25
------------------------------	----

RECORDING MOVIE CLIPS	26
------------------------------	-----------

SETTING THE MOVIE SIZE	26
------------------------	----

RECORDING AUDIO CLIPS	27
------------------------------	-----------

PLAYING BACK AUDIO CLIPS	27
--------------------------	----

RECORDING A VOICE MEMO TO STILL IMAGES	28
---------------------------------------------------	-----------

PLAYING BACK A VOICE MEMO	28
---------------------------	----

<u>OTHER RECORDING FUNCTIONS</u>	<u>29</u>
-----------------------------------------	------------------

SETTING THE METERING	29
----------------------	----

SETTING THE WHITE BALANCE	29
---------------------------	----

SETTING THE ISO	30
-----------------	----

SETTING THE EXPOSURE	30
----------------------	----

SETTING THE AEB	30
-----------------	----

SETTING THE HIGHLIGHT	30
-----------------------	----

SETTING THE SHARPNESS	31
-----------------------	----

SETTING THE PHOTO EFFECT	31
--------------------------	----

SETTING DATE STAMP	31
--------------------	----

<u>PLAYBACK</u>	<u>32</u>
------------------------	------------------

PLAYING BACK IMAGES	32
----------------------------	-----------

PLAYING BACK MOVIE CLIPS	32
--------------------------	----

MAGNIFYING & TRIMMING STILL IMAGES	33
------------------------------------	----

VIEWING IN THUMBNAIL	34
----------------------	----

PLAYING A SLIDE SHOW	34
----------------------	----

DELETING FILES	35
-----------------------	-----------

DELETING A SINGLE FILE	35
------------------------	----

DELETING MULTIPLE FILES	36
-------------------------	----

DELETING ALL FILES	36
--------------------	----

PROTECTING A SINGLE FILE	37
--------------------------	----

PROTECTING ALL FILES	37
PROTECTING MULTIPLE FILES	38
EDITING IMAGES	39
ROTATING STILL IMAGES	39
CHANGING THE IMAGE SIZE	39
CHANGING THE IMAGE WITH EFFECTS	40
COPYING THE FILES	41
SETTING THE DPOF	42
CHOOSING A STARTUP IMAGE	43
 <u>SOFTWARE INSTALLATION</u>	 <u>44</u>
 SYSTEM REQUIREMENTS	 44
WINDOWS®	44
MACINTOSH®	44
INSTALLING THE SOFTWARE	45
INSTALLING THE SOFTWARE DRIVER	46
INSTALLING PRESTO! MR. PHOTO	46
 <u>MAKING CONNECTIONS</u>	 <u>47</u>
 CONNECTING THE CAMERA TO A TV	 47
CONNECTING THE CAMERA TO A PC	48
USING THE CARD READER	48
CONNECTING THE CAMERA TO A COMPUTER WITH THE USB CABLE	48
 <u>APPENDIX</u>	 <u>49</u>
 ABOUT THE FOLDER & FILE NAME	 49
FOLDER STRUCTURE	49
FILE NAMING	49
FORMATTING THE MEMORY	50
TROUBLESHOOTING	51
SPECIFICATIONS	52
FUNCTION AVAILABLE LIST	53

Getting Started

Using This Menu

Getting Started

This section contains information you should know before using this camera.

Basic Operation

This section explains all recording features of this camera.

Basic Recording

This section explains how to record still images, movies, and audio files.

Other Recording Functions

This section explains common operations about recording images.

Playback

This section explains playback, delete, and edit functions of still images, movies and audio files.




Making Connections

This section tells you how to connect this camera to a computer or TV.

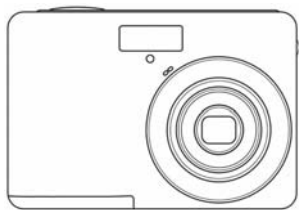
Appendix

This section describes the troubleshooting and the camera specification.


The meanings of the symbols used in this user's manual are explained below:

 Caution	This indicates cautions that should be read before using these functions.
 Tips	This indicates the useful information when using this camera.
	This indicates the reference page.


Unpacking




Camera



USB Cable

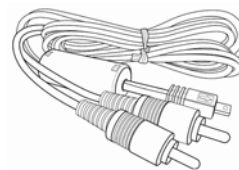


AV Cable

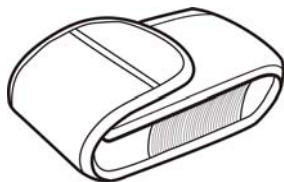


Soft Case(*)



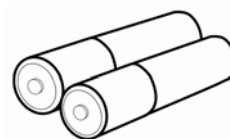
Strap




2 x AA Batteries

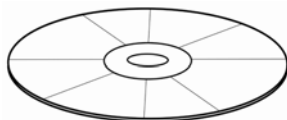

Software Installation
CD-ROM

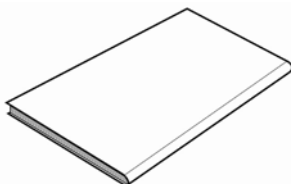

Quick Start Guide

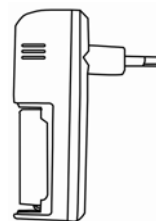


Battery Charger(*)




Caution

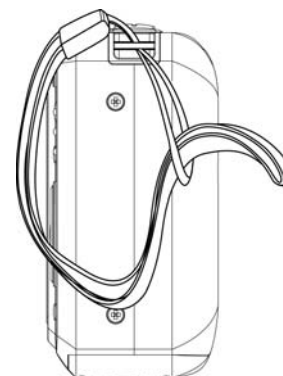
- Actual accessories may be different.
- Items marked with (*) are available as optional accessories.
- Note that the shape of the charger plug depends on the area where you purchased the camera.
- Do not swing the camera around by the strap.



Parts of the Camera

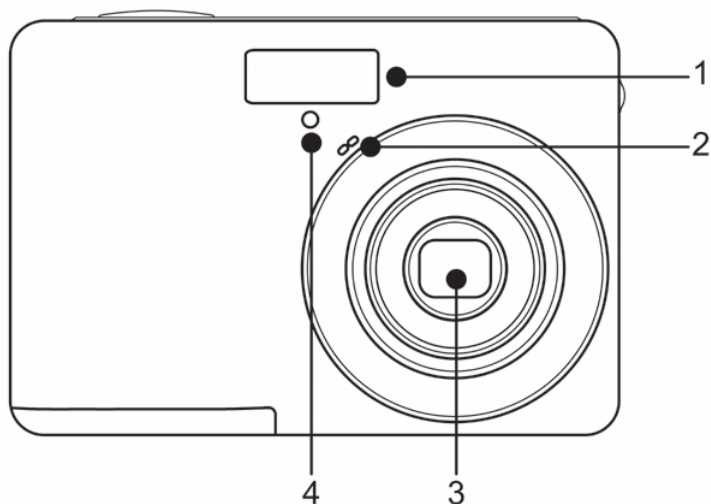


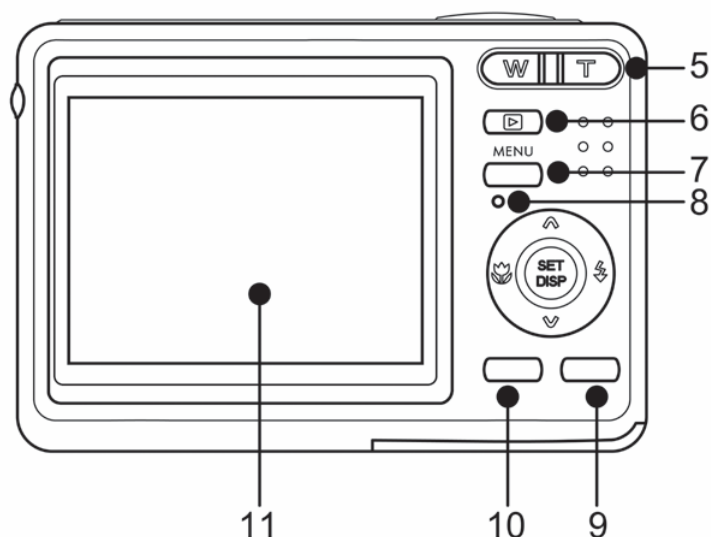- 1. Flash (👉 page 23)
- 2. Self-timer Lamp
- 3. Lens
- 4. Microphone




- 5. Zoom Button (👉 page 22)
 - Thumbnail (👉 page 34)
 - Playback Zoom (👉 page 33)
- 6. Playback Button (👉 page 13)
- 7. Menu Button (👉 page 15)
- 8. Operation Lamp
- 9. Mode Button (👉 page 13)
- 10. Delete Button (👉 page 35)
- 11. LCD Monitor (👉 page 9)

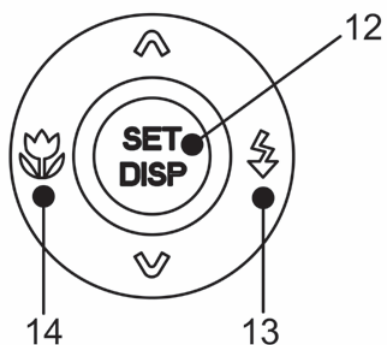
Four-way Control



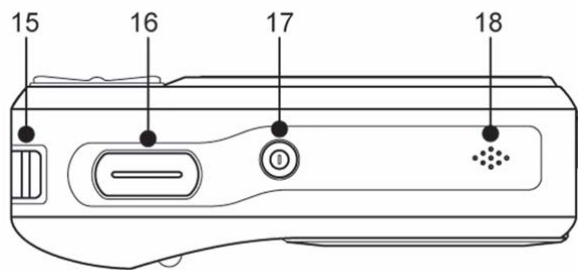
- 12. SET/DISP Button (👉 page 11)
- 13. Flash Button (👉 page 23)
- 14. Macro Button (👉 page 24)



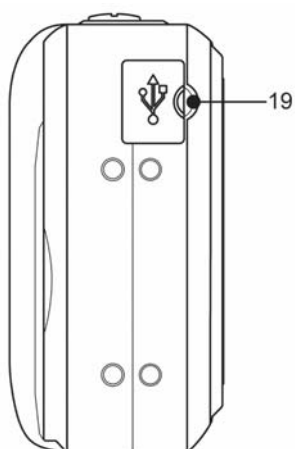- 15. Strap Ring
- 16. Shutter Button
(☞ page 19, 26)
- 17. Power Button (☞ page 12)
- 18. Speaker



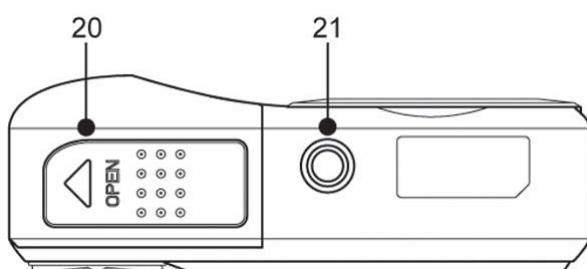- 19. USB/AV Terminal
(☞ page 18, 48)



- 21. Battery Cover (☞ page 5)
- 22. Tripod Socket

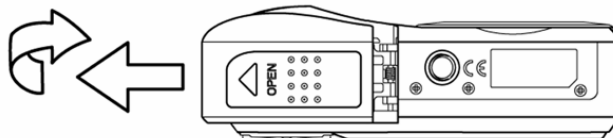
Inserting the Batteries

The camera is powered by two AA-size alkaline batteries or rechargeable Ni-MH batteries.

1

Open the battery cover.


- Slide the battery cover in the direction indicated by the arrow.



2


Insert the batteries.

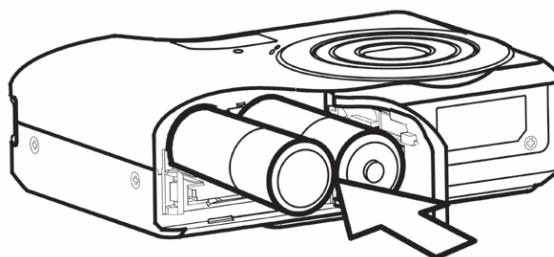- Insert two AA-size batteries with the positive (+) and negative (-) poles matching the directions indicated inside the battery room.




3

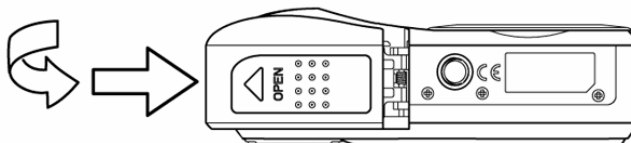Close the battery cover.



Low Battery Indicator


A low battery indicator  appears on the LCD screen when the batteries are nearly exhausted. Batteries should be replaced promptly when the low battery indicator appears.



Caution

- Risk of explosion if battery is replaced by an incorrect type dispose of used batteries according to the instructions.
- Be sure to turn off the camera power before insert or remove batteries.
- Use only Alkaline or Ni-MH battery to power this camera. Use of types battery is not recommended.
- Replace all batteries at the same time. Never mix old and new batteries.
- Remove batteries if you will not be using them for a long time.
- The camera body may feel warm after extended use. This is normal.

About Battery Type

After replacing the batteries, please check the Battery Type in the setup menu ( page 18).

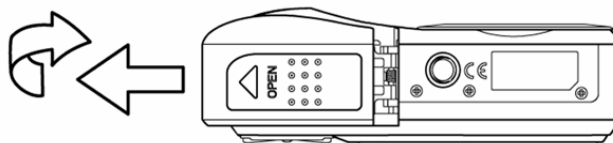
Inserting the Memory Card

You can use SD Card with this digital camera. The memory card slot is located beneath the battery cover, adjacent to the battery compartment.

1

Open the battery cover.


- Slide the battery cover in the direction indicated by the arrow.



2

Insert the card.

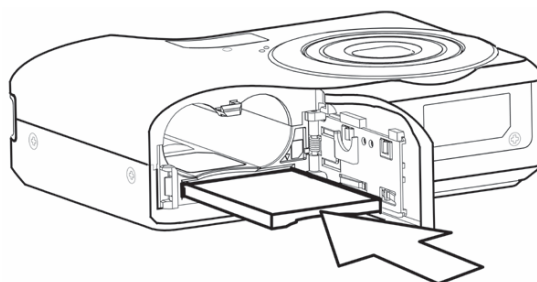- Insert the card with the label facing up and the arrow pointing in.




?

Tips

- To remove the card, gently press on the edge of the card and release it. Pull the card out and close the battery cover.

3

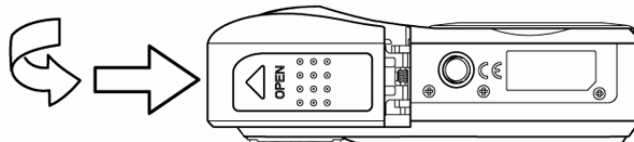Close the battery cover.



!

Caution

- It may damage the card or data if removing the card while the camera is Power On.
- Do not touch the connection terminals on the back side of the card.

About Camera Memory

This camera is equipped with internal memory. If the memory card is not inserted in the camera, all images and movie clips recorded by the camera will be stored in the internal memory. If the memory card is inserted, images and movie clips are stored on the memory card.

DCF Protocol

The DCF protocol defines the format for image file data as well as the directory structure for the memory card. Images that are taken by a DCF camera can be viewed on DCF-compatible cameras from other manufacturers.

Setting the Display Language / Date & Time

When using the camera for the first time after purchasing, be sure to choose a language and set the date & time before using the camera.

Setting the Display Language

1 Turn the power on, and set the camera to the Setup Menu (☞ page 16).

2 Select [🗨️ Language].

- Press ▲ or ▼ to select [LANGUAGE] then press ► or the SET button to launch the submenu.



3 Select a language.

- Press ▲ or ▼ to select a language and press ◀ or the SET button to apply the setting.

4 Press the MENU button to close the menu.

Setting the Date & Time

1 Turn the power on, and set the camera to the Setup Menu (☞ page 16).

2 Select [📅 Date & Time].

- Press ▲ or ▼ to select [Date & Time] then press ► or the SET button to launch the submenu.



3 Set date and time.

- Press ▲ or ▼ to change the value of the cursor located. Press ◀ or ► to move the cursor between settings.



Tips

- Holding down ▲ or ▼ changes the values continuously.
- For date stamp setting (☞ page 31).

4

Apply the setting.

- After adjusting the settings, press the **SET** or the **MENU** button to apply the setting.



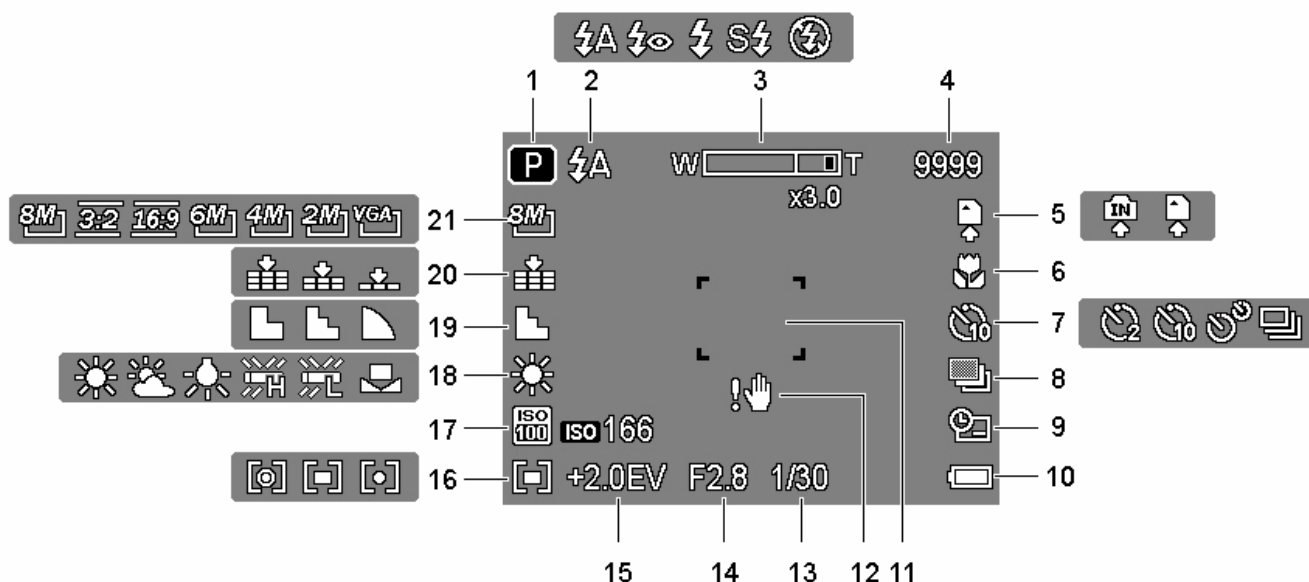
Caution

- If the batteries are removed for longer than 48 hours, the Date and Time will need to be re-set.

Using the LCD Monitor


The LCD monitor is used to compose images while recording, adjust settings and replay images. The following indicators may appear on the LCD monitor while recording or playing back images.

REC mode



- | | | | |
|----|--------------------------------|----|----------------------------|
| 1 | Recording mode (👉 page 13) | 12 | Shake warning (👉 page 19) |
| 2 | Flash (👉 page 23) | 13 | Shutter speed (👉 page 19) |
| 3 | Zoom indicator (👉 page 22) | 14 | Aperture value (👉 page 19) |
| 4 | Shots remaining | 15 | Exposure (👉 page 30) |
| 5 | Storage media | 16 | Metering (👉 page 29) |
| 6 | Macro (👉 page 24) | 17 | ISO (👉 page 30) |
| 7 | Self-timer / Burst (👉 page 25) | 18 | White balance (👉 page 29) |
| 8 | AEB (👉 page 30) | 19 | Sharpness (👉 page 31) |
| 9 | Date stamp (👉 page 31) | 20 | Quality (👉 page 21) |
| 10 | Battery (👉 page 5) | 21 | Resolution (👉 page 21) |
| 11 | Focus area (👉 page 19) | | |

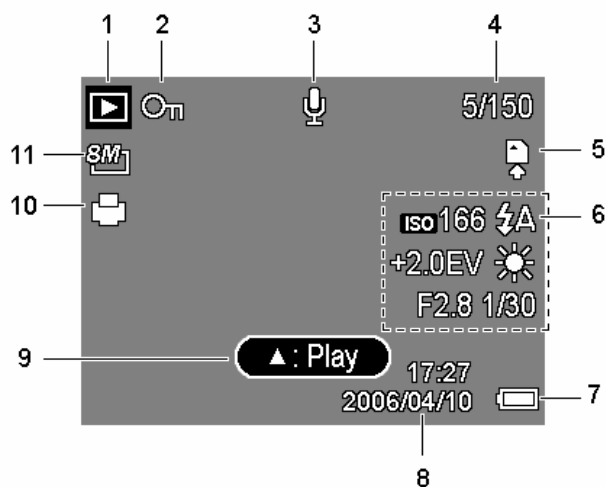PLAYBACK mode



- | | |
|------------------------------|----------------------------------|
| 1 Playback mode (👉 page 13) | 7 Battery (👉 page 5) |
| 2 Protect (👉 page 37) | 8 Captured date & time |
| 3 Voice memo (👉 page 28) | 9 Voice memo control (👉 page 28) |
| 4 File number / Total | 10 DPOF (👉 page 42) |
| 5 Storage media | 11 Resolution (👉 page 21) |
| 6 Recording info (👉 page 11) | |



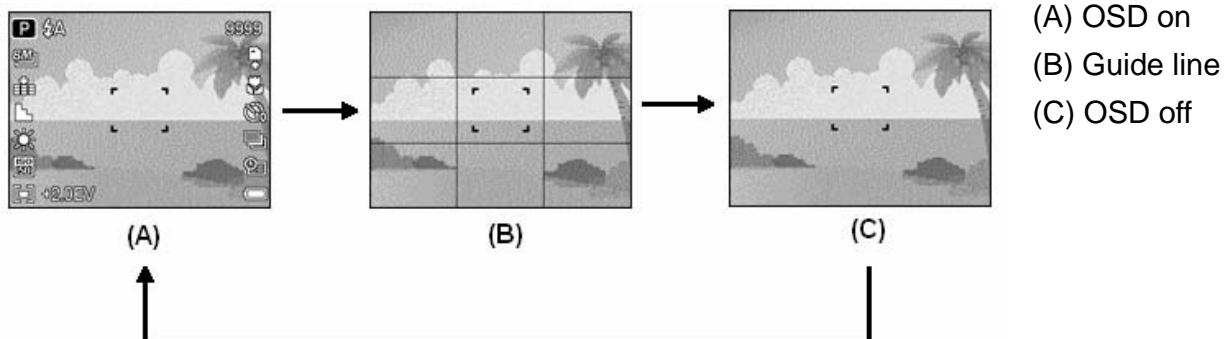
Caution

- Some information may not display correctly if you display images captured by other camera model.

Changing the LCD Status

Press the **SET/DISP** button changes the LCD status as shown below:


■ REC mode



Tips

- Use the “Guide line” to compose images easily before shooting images.

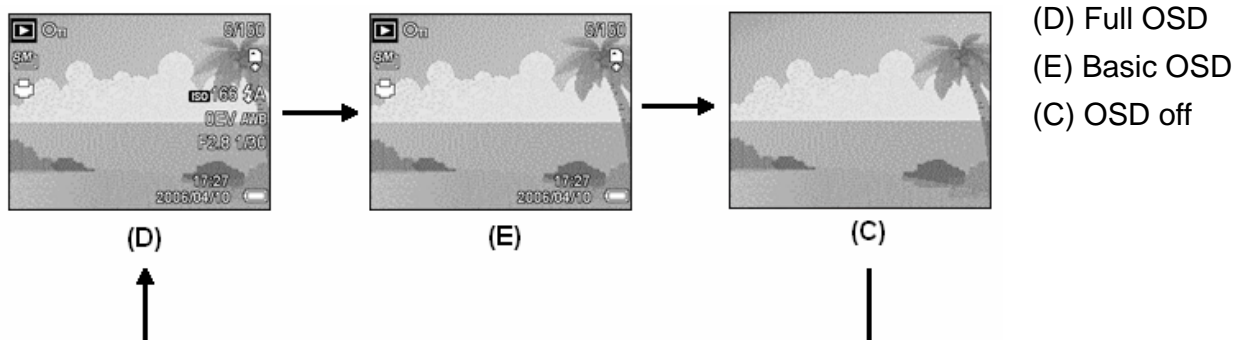■ PLAYBACK mode



Caution

- You cannot change the LCD status in the following situation:
 - Manual exposure
 - Recording movie clips or audio files
 - Playing movie clips or audio files
 - Playing the slideshow
 - Viewing in thumbnail
 - Trimming a still image
- When the LCD status is not in “OSD on”, press Macro (◀) or Flash (▶) will change the display mode to “OSD on” automatically.

Basic Operation

Turning the Power On and Off

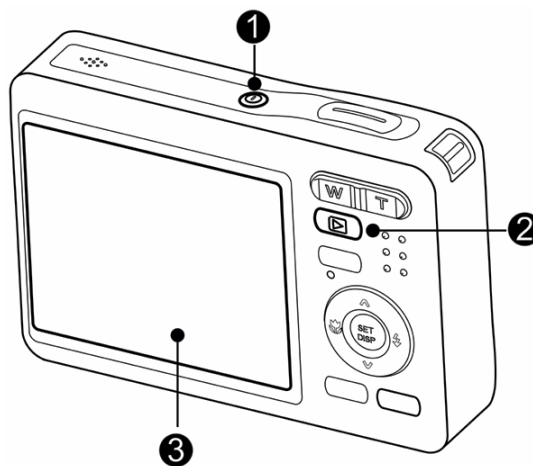
1

Press the **POWER** button (❶) to turn on the camera in the **REC** mode.

- The power turns on, the lens extends and the LED lights in green.

Press the **PLAYBACK** button (❷) to turn on the camera in the **PLAYBACK** mode.

- The power turns on, and an image displays on the LCD monitor (❸).



2

Press the **POWER** button (❶) again to turn the power off.

- The power turns off, the lens retracts and the LED turns off.



Tips

- You can turn on the camera without the start-up and operating sound by pressing and holding the **POWER** (❶) or the **PLAYBACK** (❷) button over 1.5 seconds.
- Switch between **REC** mode and **PLAYBACK** mode (👉 page 13).

Power Saving Function

For saving the battery power, the LCD monitor automatically turns off 1 minute after the last control accessed (factory-preset setting). Press any buttons other than the power button to turn on the LCD monitor. You can change the power save setting in Setup menu (👉 page 17).

After the power saving function has been active for 1 minute, the power will turn off completely. Press the **POWER** (❶) or the **PLAYBACK** (❷) button to restore the power.

The power save feature will not activate in the following situation:

- Recording movie clips or audio files
- Playing movie clips or audio files
- Playing the slideshow
- Connecting the camera to a computer or printer with the USB cable

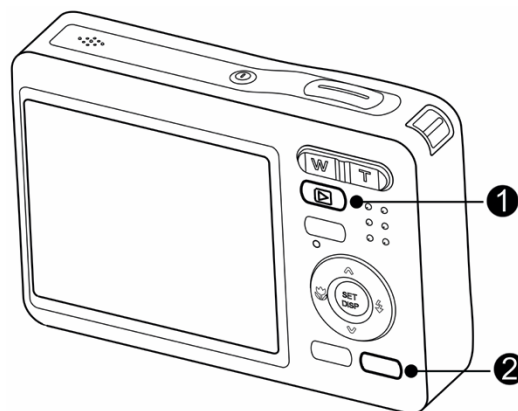
Changing the Mode

You can record images and voices in the REC mode. And using the PLAYBACK mode to replay, delete, or edit images on the LCD monitor.

Switching between REC mode and PLAYBACK mode

In REC mode, press the **PLAYBACK** button (❶) to switch to the PLAY mode.

In PLAY mode, press the **PLAYBACK** (❶) or the **MODE** (❷) button to switch to the REC mode.



Selecting the REC mode

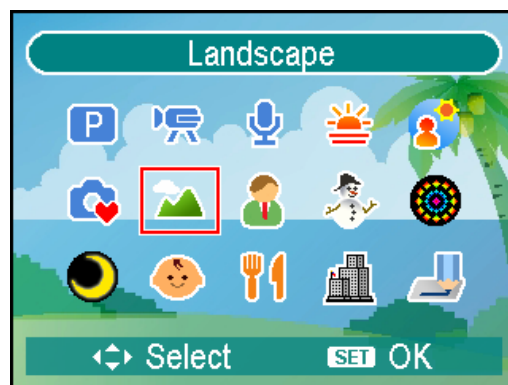
1 Set the camera to the REC mode (👉 page 13).

2 Launch the mode palette.











- Press the **MODE** button (❷) to show the scene mode palette.

3 Select a mode.

- Use the four-way control to select a desired mode and press the **SET** button to confirm the setting.



Display	Title	Description
	Program	The camera makes settings suitable for the shooting conditions.
	Movie	For recording movie clips.
	Voice REC	For recording audio.
	Sunset	Enhance the red hue for recording sunset images.
	Backlight	Shooting the image of backlight object by changing metering.

Display	Title	Description
	Q Mode	Allow beginners to take pictures easily.
	Landscape	Use for the wide scenic views.
	Portrait	Blurring the background to focus on the subject.
	Snow	Use for the beach or snow scenes.
	Fireworks	Slow shutter speed to take fireworks exploding.
	Night Scene	Shooting the subject while keeping the background night scenery.
	Kids	Take a still image to capture moving kids.
	Food	Higher saturation makes food more appetizing.
	Building	Enhance the edges of the subject.
	Text	Enhance the black & white contrast.

Using the Menu

When a menu is displayed, the four-way control and the **SET** button are used to make the desired settings.

REC menu

1

Turn the power on, and set the camera to the REC mode (☞ page 13).

2

Open the REC menu.

- Press the **MENU** button (❶) to display the menu.

3

Select an item.

- Press ◀ or ▶ (❷) to select a menu item.

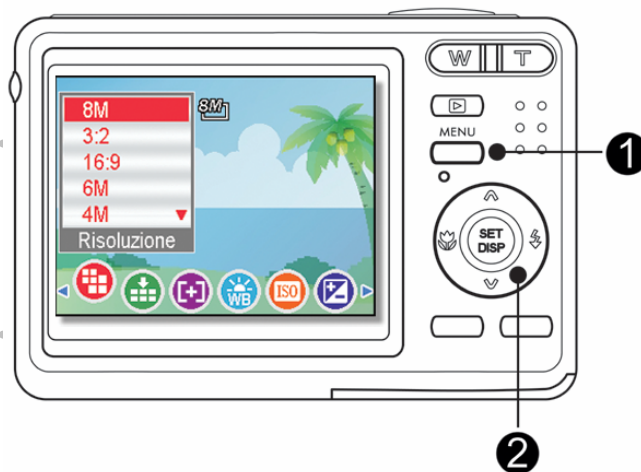
4

Change the setting.

- Press ▲ or ▼ (❷) to change the setting.

5

Press the **MENU** (❶) or the **SET** (❷) button to save the settings and close the menu.












REC menu list (Still Image)

Menu Item	Available Setting	Page
Resolution	8M / 3:2 / 16:9 / 6M / 4M / 2M / VGA	21
Quality	📶 / 📶 / 📶	21
Metering	☉ / ☐ / ☉	29
White Balance	Auto / ☀ / ☁ / ☀ / 🌧 / 🌧 / 🌧	29
ISO	Auto / ISO 50 / ISO 100 / ISO 200 / ISO 400	30
Exposure	-2.0EV ... +2.0EV	30
Drive Mode	Off / 🕒 / 🕒 / 🕒 / 📷	25
AEB	Off / 📷	30
Highlight	Off / 📷 / 📷 / 📷	30
Sharpness	📷 / 📷 / 📷	31

Effect	Off / B&W / Sepia / Negative / Red / Green / Blue	31
Date Stamp	Off / Date / Date & Time	31
Digital Zoom	Off / On	22

REC menu list (Movie)

Menu Item	Available Setting	Page
Movie Size	<u>16:9</u> / <u>640</u> / <u>320</u>	26
Metering	[] / [] / []	29
White Balance	Auto /  /  /  /  /  / 	29

Setup menu

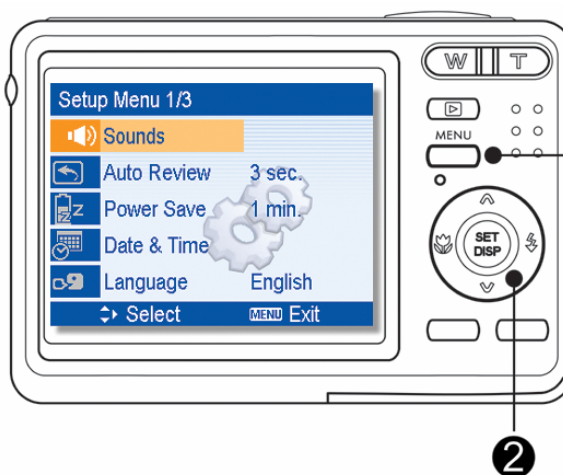
1

Turn the power on, and set the camera to the REC or PLAYBACK mode (👉 page 13).

2


Press the MENU button (❶) to open the REC or PLAYBACK menu.

- The menu displays depends on whether you are in the REC mode or the PLAY- BACK mode.



3

Open the Setup menu.

- Press four-way control (❷) to select **SETUP** () and then press the **SET** (❷) button to display the Setup menu.

4

Select an item.

- Press ▲ or ▼ (❷) to select a menu item and then press ► or the **SET** (❷) button to launch the submenu.

5

Change the setting.

- Press ▲ or ▼ (❷) to select an option and press ◀ or the **SET** (❷) button to apply the setting.

Setup menu list

Menu Item	Functions																						
Sounds	<p>[Shutter]: Sets the shutter sound on and off.</p> <p>[Start-up]: Sets a type of the start-up sound.</p> <p>[Beep]: Sets the operation sound on and off.</p> <p>[Volume]: Adjusts the volume of the shutter sound, start-up sound, beep and playback sound.</p>																						
Auto Review	<p>[Off]: The captured image will not automatically display after shooting.</p> <p>[3 sec.]: The captured image will display for 3 seconds after shooting.</p> <p>[5 sec.]: The captured image will display for 5 seconds after shooting.</p>																						
Power Save	<p>[1 min.] / [3 min.] / [5 min.]: For power consumption, the camera is turned off automatically for a period of time.</p> <ul style="list-style-type: none"> The power save feature will not activate in some situation (☞ page 12). 																						
Date & Time	Sets the date & time (☞ page 7).																						
Language	<p>Select a language for display menus and other information from the following 21 languages: (☞ page 7)</p> <table> <tr> <td>[English]: English</td><td>[繁體中文]: T. Chinese</td></tr> <tr> <td>[Deutsch]: German</td><td>[Español]: Spanish</td></tr> <tr> <td>[Italiano]: Italian</td><td>[Français]: French</td></tr> <tr> <td>[Nederlands]: Dutch</td><td>[Português]: Portuguese</td></tr> <tr> <td>[Magyar]: Hungarian</td><td>[Čestina]: Czech</td></tr> <tr> <td>[Türk]: Turkish</td><td>[Polski]: Polish</td></tr> <tr> <td>[Svenska]: Swedish</td><td>[Русский]: Russian</td></tr> <tr> <td>[Rumänisch]: Romanian</td><td>[Ελληνικά]: Greek</td></tr> <tr> <td>[عربي]: Arabic</td><td>[日本語]: Japanese</td></tr> <tr> <td>[ไทย]: Thai</td><td>[简体中文]: S. Chinese</td></tr> <tr> <td>[한국어]: Korean</td><td></td></tr> </table>	[English]: English	[繁體中文]: T. Chinese	[Deutsch]: German	[Español]: Spanish	[Italiano]: Italian	[Français]: French	[Nederlands]: Dutch	[Português]: Portuguese	[Magyar]: Hungarian	[Čestina]: Czech	[Türk]: Turkish	[Polski]: Polish	[Svenska]: Swedish	[Русский]: Russian	[Rumänisch]: Romanian	[Ελληνικά]: Greek	[عربي]: Arabic	[日本語]: Japanese	[ไทย]: Thai	[简体中文]: S. Chinese	[한국어]: Korean	
[English]: English	[繁體中文]: T. Chinese																						
[Deutsch]: German	[Español]: Spanish																						
[Italiano]: Italian	[Français]: French																						
[Nederlands]: Dutch	[Português]: Portuguese																						
[Magyar]: Hungarian	[Čestina]: Czech																						
[Türk]: Turkish	[Polski]: Polish																						
[Svenska]: Swedish	[Русский]: Russian																						
[Rumänisch]: Romanian	[Ελληνικά]: Greek																						
[عربي]: Arabic	[日本語]: Japanese																						
[ไทย]: Thai	[简体中文]: S. Chinese																						
[한국어]: Korean																							
File No.	<p>Use this function if the camera experiences a “Folder cannot be created” error or if you want to restart numbering, for example, after erasing all files.</p> <p>[Series]: Store the latest used file number no matter deleting files or inserting a new memory card.</p>																						

Menu Item	Functions
	<p>[Reset]: Reset file numbering each time the memory card is changed.</p> <ul style="list-style-type: none"> Resetting the file number is useful for avoiding the file name duplication when images are downloaded to a computer (👉 page 49).
TV Out	<p>You can review images on a television with a supplied AV cable (👉 page 47). TV Out should be set to either NTSC or PAL depending on your region.</p> <p>[NTSC]: America, Japan and others</p> <p>[PAL]: Europe, Oceania and others</p>
USB	<p>[Computer] / [Printer]: Sets the USB mode to connect the camera with a printer or computer (👉 page 48).</p>
S.Image	Sets a recorded image as the start-up image (👉 page 43).
Format	<p>To erase all data stored in the memory card if you are using a card, or all data stored in the internal memory if there is no card inserted.</p> <ul style="list-style-type: none"> A “BUSY...PLEASE WAIT” message displays and the memory card is starting format. A “COMPLETED” message displays when finish formatting. All data will be deleted including protected files. Be sure to download important files to your computer before formatting.
Battery Type	<p>To ensure the camera displays battery level correctly, set the type to match the batteries used.</p> <p>[Alkaline]: When use alkaline batteries.</p> <p>[NiMH]: When use NiMH batteries.</p>
Reset All	<p>Resets the entire menu and button operation settings to initial default.</p> <p>The following settings do not change after Reset All:</p> <ul style="list-style-type: none"> Date & Time setting Language setting TV out setting Battery Type

Basic Recording

Recording Still Images

1

Turn the power on, and set the camera to the REC mode (☞ page 13).

2

Compose the subject on the monitor.

- Aim the focus area (❶) to the subject that you want to take.

3

Half press the shutter button to focus the image.

- The focus area (❶) becomes green while in focus, then shutter speed (❷), aperture value (❸) and ISO value (❹) are displayed.
- If the shutter speed is slow or the possibility that image may be blurred, the shake warning icon !👉 may appear on the LCD monitor. To avoid this, use a tripod to stabilize the camera when recording images.

4

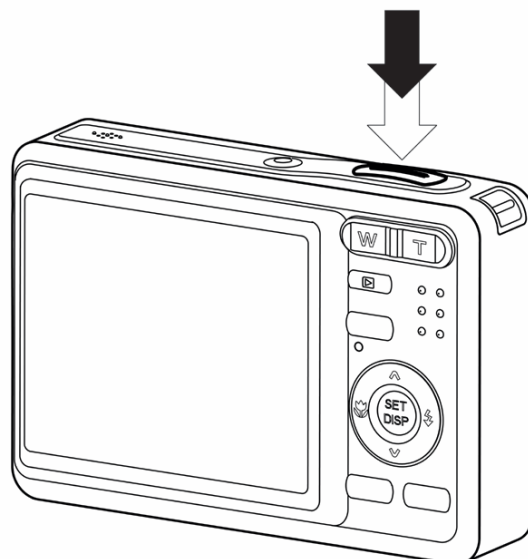
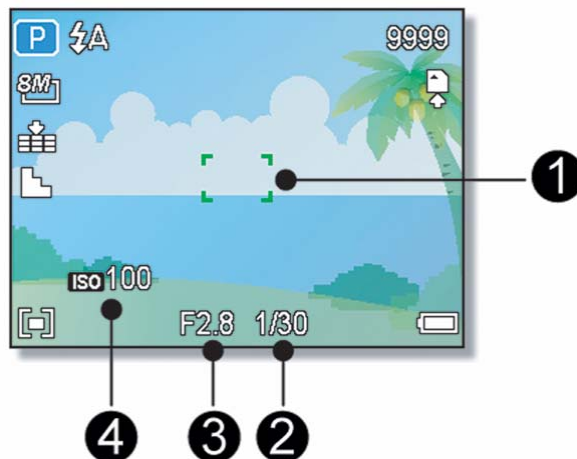
Take a picture.

- Press the shutter button fully to take a picture.




Caution

- Make sure that your fingers or the wrist strap does not block the lens.



Using the Q mode

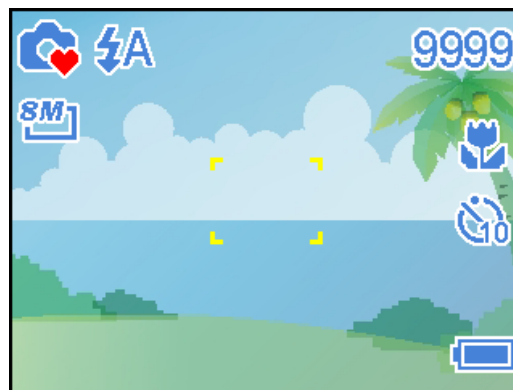The Q mode provides a simplified camera interface. Larger icons and fewer controls make it easier to take pictures anytime, especially for the beginners and elder users.



You can use only the basic settings in the Q mode:

Button	Flash: Auto / Red eye / Force on / Slow sync / Force off
	Macro: Off / On
	SET/DISP: OSD on / Guide line / OSD off
Menu	Resolution: 8M / 3:2 / 16:9 / 6M / 4M / 2M / VGA
	Drive Mode: Off / 2 sec. / 10 sec. / Double / Burst
	Beep: Off / On
	Auto Review: Off / 3 sec. / 5 sec.

Rest of settings will not be controlled as below:

Fixed setting (*)	<ul style="list-style-type: none"> Quality: S.Fine Metering: Multi White balance: Auto ISO: Auto Exposure: Auto AEB: Off 	<ul style="list-style-type: none"> Highlight: Off Sharpness: Normal Effect: Off Date Stamp: Date & Time Digital Zoom: Off
Utility setting (**)	<ul style="list-style-type: none"> Shutter sound Start-up sound Power save Date & Time Language 	<ul style="list-style-type: none"> File No. TV out USB Start-up image










(*)Fixed setting: Settings are fixed in Q mode.

(**)Utility setting: Use the same setting as last mode used.




Setting Image Size and Quality

You can select lower image resolution and quality to decrease the image size to capture more images. Choose a suitable setting according to the desired image quality and purpose. For details, see page 15.

Resolution Values

Image Size		Print Size	
	3264 x 2448	Printing larger than A4-size.	Larger
	3264 x 2176		
	3264 x 1840		
	2816 x 2112		
	2272 x 1704		
	1600 x 1200		
	640x480	Printing to postcards or attaching to e-mail.	Smaller

Quality Values

Compression		Purpose	
	Super Fine	Shoot higher quality images.	Higher Quality
	Fine	Shoot normal quality images.	
	Normal	Shoot for more images.	Lower Quality

Using the Zoom Function

Your camera has a combination of optical and digital zoom functions that allows you to zoom in on far away subjects or zoom out for a wide angle shot.

The optical zoom is achieved by mechanically adjusting the lens of the camera. The digital zoom enlarges or shrinks the image using a software process.

1

.....

Select the zoom setting, and point the camera at the subject.

2

.....

Press the zoom button (❶) to compose the image.

[W]: zoom out for a wide-angle shot.

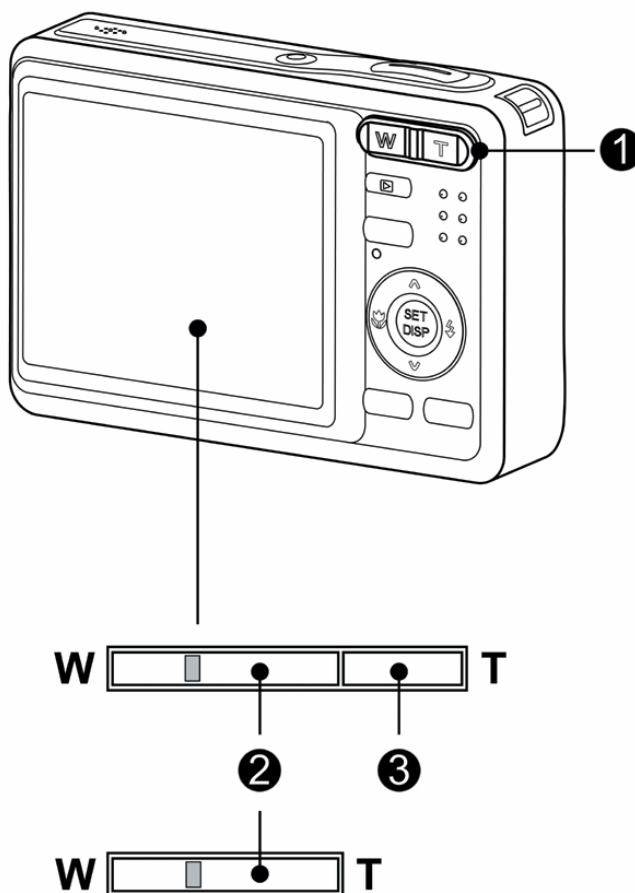
[T]: zoom in for a telephoto shot.

- When the zoom button is pressed, the zoom bar appears on the LCD monitor.
- When the optical zoom (❷) factor is at maximum, zooming stops temporarily. Press the **[T]** again, the camera switches to the digital zoom (❸) automatically and zooming continues.
- The digital zoom (❸) will not activate in movie recording.

3

.....

Press shutter button to take a picture.



Tips

- Digital zoom works by enlarging the centre portion of an image through a software interpolation process.
- The digital zoom is used to achieve magnification levels up to approx. 4 times.

Using the Flash

The flash is not only for taking pictures when there is insufficient light, but also when the subject is in shade or in backlight conditions. Press the flash button to cycle your camera through the various flash modes. The flash will not activate when continuous shooting or movie recording.

1
Turn the power on, and set the camera to the REC mode (👉 page 13).

2
Press the flash button (❶) to change the flash mode.

- Each time the flash button is pressed, the flash icon (❷) changes.



Auto flash:

Flash fires automatically when shooting conditions require extra lighting.



Red-eye reduction:

Flash strobes to let the subject's eyes adjust to the flash, then fires again to take the actual image. Your camera will detect the subject brightness and use the flash only when required.



Force on:

Flash fires every time you take a photo, regardless of lighting conditions.



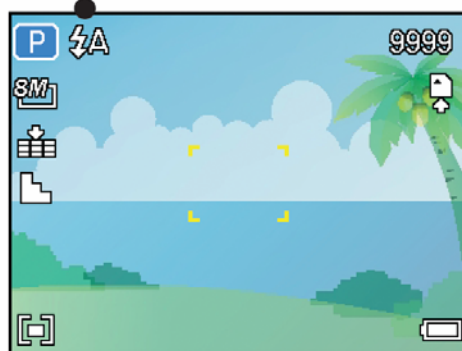
Slow sync:

Flash fires with a slow shutter speed.



Force off:

The flash never fires even in dark situation.



3
Press shutter button to take a picture.



Caution

- The flash charging time may increase when the battery is low.
- The available flash settings are limited depending on the REC mode you selected (👉 page 53).

Using the Macro

Your camera is equipped with a macro function that allows you to focus on very close subjects. In macro mode you can focus on subjects 15 cm from the lens when in the maximum wide angle setting and 40 cm in the maximum telephoto setting.

1

.....
Turn the power on, and set the camera to the REC mode (☞ page 13).



2

.....
Press the macro button (❶) enters the macro mode.

- The macro icon (❷) displays in the LCD monitor.
- To leave the macro mode, press the macro button (❶) again.

3

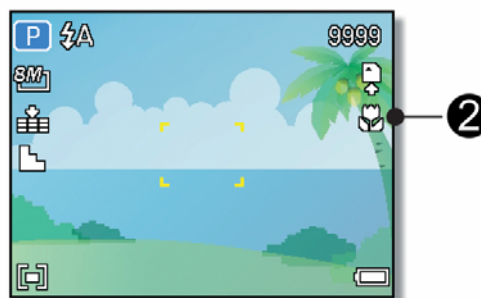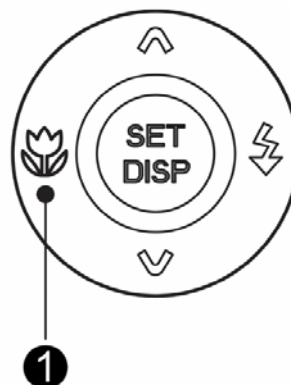.....
Press shutter button to take a picture.



Tips

- Distances referred to measure the distance between the camera lens surface and the subject.

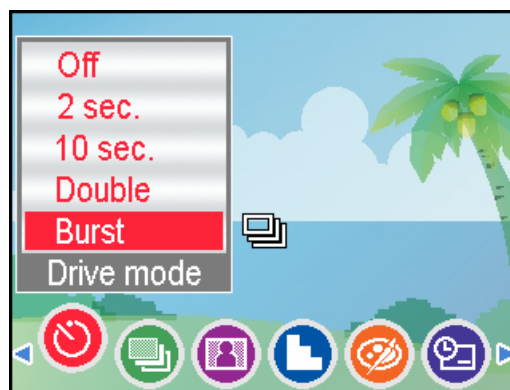
Using the Self-timer & Burst

Use the self-timer to set a delay from the time the shutter button is pressed to the time the image is shot. Use the burst to record continuous still images shooting.

1
Turn the power on, and set the camera to the REC mode (👉 page 13).

2
Open the REC menu (👉 page 15).
• Use ◀ or ▶ to select [Drive mode] from the REC menu.

3
Change the setting.
• Press ▲ or ▼ to select a drive mode, then press the **SET** button.



Off:

Record a single image.



2 sec.:

The shutter release will be delay for 2 seconds.



10 sec.:

The shutter release will be delay for 10 seconds.



Double:

Record two images in a shot after pressing the shutter release button 10 and 12 seconds.



Burst:

Keep pressing the shutter button fully to take continuous shooting.
Release the shutter button to stop shooting.

4
Press shutter button to take a picture.



Tips

- When using the self-timer function, be sure to use a tripod or place the digital camera on a level, stable surface.

Recording Movie Clips

1

Turn the power on, and set the camera to the Movie mode (☞ page 13).

2

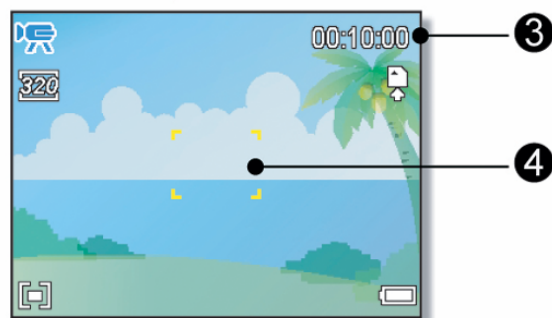
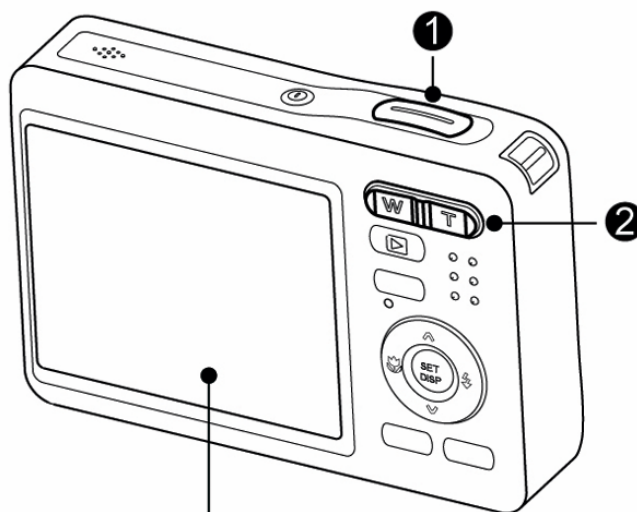
Compose the subject on the monitor.

- Aim the focus area (④) to the subject that you want to take.
- The LCD monitor displays the available recording time (③).

3

Start recording.

- Press the shutter button (①) to start recording.
- Using the zoom button (②) to adjust the image size.
- The White Balance is set and locked to the settings of the first frame



Caution

- Sound cannot be recorded while pressing the zoom button.
- The digital zoom cannot be used in Movie mode.

4

Finish recording.

- Press the shutter again to end recording.
- The camera will stop recording automatically when the memory capacity has been reached.

Setting the Movie Size

Movie Size and Frame Rate

Resolution		Frame Rate	
<u>16:9</u>	720 x 400	30 frames/sec.	Higher Quality ↑↓ Lower Quality
<u>640</u>	640 x 480		
<u>320</u>	320 x 240		

Recording Audio Clips

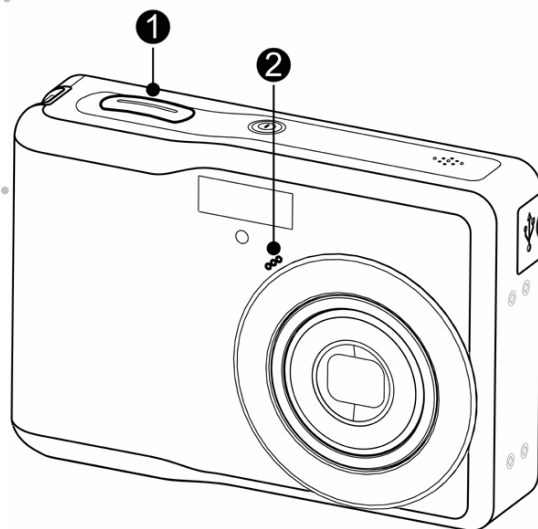
1

Turn the power on, and set the camera to the Voice REC mode (👉 page 13).

2

Press the shutter button (❶) to start recording.

- The voices are recorded from the microphone (❷) of the camera. Be careful to avoid touching the microphone while recording.



3

Press the shutter button again to end recording.

- The camera will stop recording automatically when the memory capacity has been reached.

Playing Back Audio Clips

1

Turn the power on, and set the camera to the PLAYBACK mode (👉 page 13).

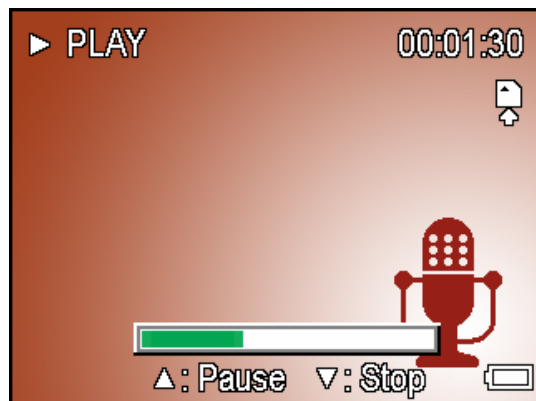
2

Press ◀ or ▶ to select the audio clip that you want to playback.

3

Start playing back.

- Press ▲ to start playing the audio clip.
- Press ▼ to stop the audio clip, or press ▲ to pause it. When audio clip paused, press ▲ again to resume.




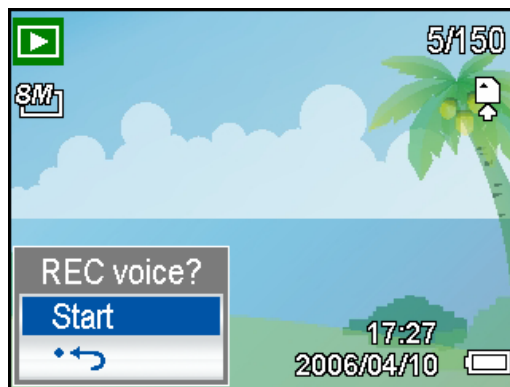
Recording a Voice Memo to Still Images

You can add a voice memo to the still images after you record it.


1
Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).

2
Press ◀ or ▶ to select a still image that you want to add a voice memo.

- If the image already has the voice memo recorded, the  appears on the LCD monitor. The new recording will replace the previous one.



3
Open the **PLAYBACK** menu.

- Press the **MENU** button, using four-way control to select **Voice Memo** () and press the **SET** button.

4
Press the **SET** button to start recording for 30 seconds.

- Press the **SET** button again to end recording.



Caution

- The voice memo cannot be added to a movie clip or a protected image.
- You cannot delete only the voice memo. When you delete the image, the attached voice memo is also deleted.

Playing Back a Voice Memo

1
Turn the power on, and set the camera to the **PLAY** mode (☞ page 13).

2
Press ◀ or ▶ to select the image that has the voice memo recorded.




3
Start playing back.

- Press ▲ to start playing the voice memo.
- Press ▼ to stop the voice memo, or press ▲ to pause it. When voice memo paused, press ▲ again to resume.

Other Recording Functions







Setting the Metering

There are 3 different light metering options available on your camera.

Option	Description
	Light is measured from the entire shooting screen, but gives more importance to the values near the centre.
	Select an exposure based on readings from multiple points in the subject area.
	Select an exposure based on a single reading taken from the centre of your picture.

Setting the White Balance

Adjust the white balance to match different light sources such as sunlight, incandescent (tungsten) lighting or, fluorescent lighting.

Option	Description
AUTO	Automatically correct white balance. Ideal for general photography.
	Adjust for bright sun conditions, or natural light conditions.
	Adjust for cloudy days or twilight conditions.
	Adjust for normal indoor lighting conditions. Corrects the orange hue of household light bulbs. Ideal for indoor photos under tungsten or halogen lighting without a flash.
	Adjust for fluorescent lighting. Corrects the green hue of fluorescent lighting. Ideal for indoor photos under fluorescent lighting without a flash.
	
	For more accurate adjustment or when the light source cannot be specified.



Tips

- Point the camera at a white piece of paper or similar object under the lighting conditions for which you want to set the white balance, and then press the Shutter button.

Setting the ISO

With the initial settings, the ISO sensitivity is automatically set according to the brightness of the subject.

Option	Description
Auto	Sets the ISO sensitivity automatically.
ISO 50	Sets the sensitivity to ISO 50 equivalent.
ISO 100	Sets the sensitivity to ISO 100 equivalent.
ISO 200	Sets the sensitivity to ISO 200 equivalent.
ISO 400	Sets the sensitivity to ISO 400 equivalent.



Tips

- Higher ISO speeds increase the image noise. To take clean images, use as low an ISO speed as possible.




Setting the Exposure

Set the exposure value manually to compensate for unusual lighting conditions such as indirect indoor lighting, dark backgrounds, and strong backlighting.

Setting the AEB




Sets the auto exposure bracketing (AEB) to shoot 3 continuous images, each with a different exposure setting: correctly exposed, underexposed, and overexposed.

Setting the Highlight

Make the subject stand out from its surroundings. The subject will be in focus in three different ranges:  /  / 

Setting the Sharpness

You can select whether you want the image to have sharp or soft outlines.

Option	Description
	The edges of the image are emphasized. The edges will become sharp, but noise may occur in the recording image.
	The edges of the image are sharp. This is suitable for printing.
	The edges of the image are softened. This is suitable for editing images on PC.

Setting the Photo Effect

You can add special effects to your images in Record mode or in Playback mode.

Option	Description
Off	No effect is added to the image.
B&W	Convert image to black & white.
Sepia	Recorded image will be stored in a sepia tone.
Negative	Opposite what they were in the original image.
Mosaic	Add mosaic tiles to the images. (Playback only)
Red	The image becomes reddish.
Green	The image becomes greenish.
Blue	The image becomes bluish.

Setting Date Stamp

The Date Stamp function can be used to add a date to your pictures as you take them.

Option	Description
Off	Do not add the recorded date & time to printed images.
Date	Only add the recorded date to printed images.
Date & Time	Add the recorded date & time to printed images.

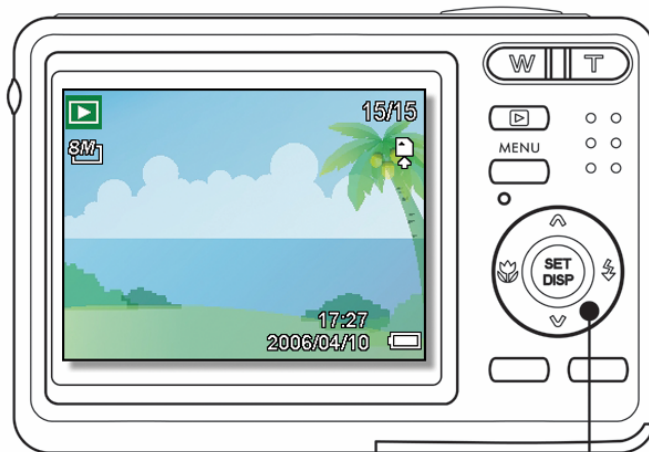
Playback

Playing Back Images

1

Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).

- The latest recorded image appears on the LCD monitor.
- If there are no images stored, a message **[No image]** appears.



2

Press the four-way control ◀ or ▶ (①).

- ◀: displays the previous image.
- ▶: displays the next image.

?

Tips

- Holding down ◀ or ▶ scrolls images in a high speed.

Playing Back Movie Clips

1

Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).

2

Press ◀ or ▶ to select a movie clip that you want to playback.

3

Start playing back.

- Press ▲ to start playing the movie clip.
- Press ▼ to stop the movie clip, or press ▲ to pause it. When the movie paused, press ▲ again to resume.

?

Tips

- During movie playing back, press ▶ to fast forward or press ◀ to rewind it.
- Press the shutter to capture the still image from the movie clip while it had paused.

Magnifying & Trimming Still Images

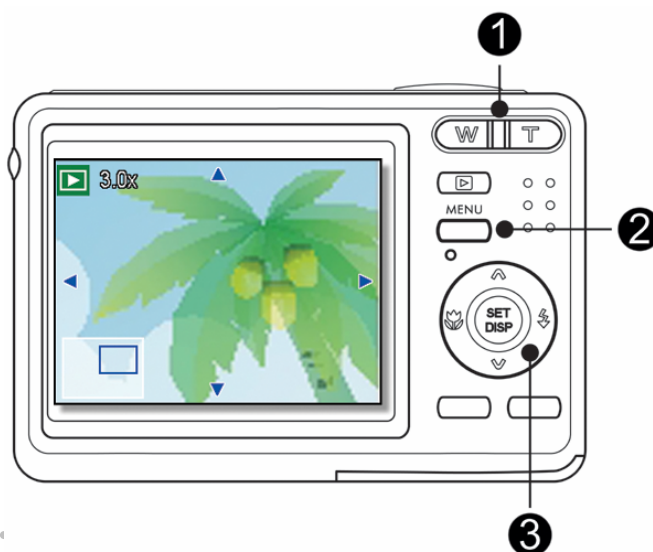
1

Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).

2

Select an image.

- Press ◀ or ▶ (Ⓢ) to select the image that you want to magnify or trim.
- Only still images can be magnified and trimmed.



3

Magnify the image.

- Press **[T]** (1) to magnify the image, and the central portion of the image is displayed. You can use the arrow button (Ⓢ) to view different parts of the magnified image.
- Press the **MENU** button (2) to return to the normal size.

4

Trim the image.

- Press the **SET** button (3) to set the image trimming.

5

Save the image.

- Press the **SET** button (3) again to trim the selected image and save it as a new one.

Viewing in Thumbnail

- 1 Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).
- 2 Press the zoom button [W], a thumbnail screen is displayed.
- 3 Use the four-way control to select the desired image, and press [T] or the **SET** button to show the selected image in full screen.

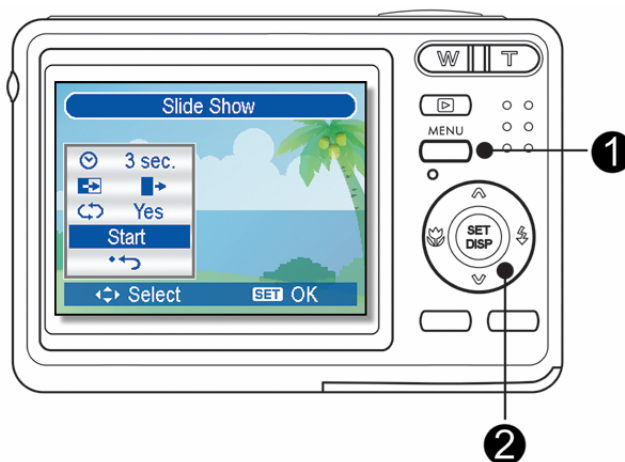


? Tips

- You can protect or delete multiple images in thumbnail, see page 36, 38.

Playing a Slide Show

- 1 Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).
- 2 Enter the slide show.
 - Press the **MENU** button (❶), use the four-way control (❷) to select **Slide Show** (📺) and press the **SET** button (❷).
- 3 Change the slide show settings.
 - Use the four-way control (❷) to set the slideshow interval (🕒), effect (🎨) and repeat (🔄).
 - You can set the interval between 1~10 seconds.
- 4 Playing the slide show.
 - Press the **SET** button (❷) to start the slideshow.
 - During the slideshow, press the **SET** button (❷) to pause the slideshow and press the **SET** button again to resume.



Deleting Files

Deleting a Single File

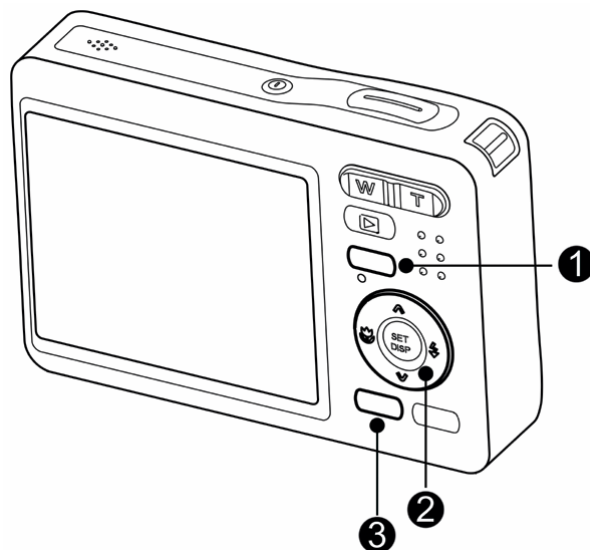
1

Turn the power on, and set the camera to the **PLAYBACK** mode (👉 page 13).

2

Open the menu.

- Press the **MENU** button (❶), then use the four-way control (❷) to select **Delete** (🗑️) and press the **SET** button (❸).



3

Press ▲ or ▼ (❷) to select **[SINGLE]**, and then press the **SET** button (❷).

4

Press ◀ or ▶ (❷) to select the image you want to delete.

5

Press the **SET** button (❷) to delete the image.

- Repeat step 4~5 to delete images.



Tips

- To quickly delete the current display image
 - Select the image you want to delete.
 - Press the **Delete** button (❸) to show a confirmation.
 - Press the **SET** button (❷) to delete the current display image.
- Protected images cannot be deleted with this function.

Deleting Multiple Files

1 Turn the power on, and set the camera to the thumbnail screen (☞ page 34).

2 Open the menu.

- Press the **MENU** button, then Press ◀ or ▶ to select to select **Delete** (🗑️) and press the **SET** button.



3 Press ▲ or ▼ to select [Select], and then press the **SET** button.

- The frame of the selected image turns green.

4 Select multiple images.

- Use the four-way control to select the image.
- Press the **SET** button toggles the 🗑️ on and off. Repeat this step until all images that you want to delete are displayed with an icon 🗑️.

5 Delete images.

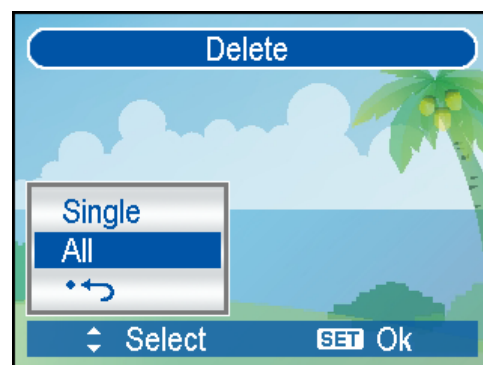
- Press the **MENU** button, then select [Yes] and press the **SET** button. All selected images will be deleted.
- To cancel delete, press the **MENU** button in this step.

Deleting All Files

1 Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).

2 Open the menu.

- Press the **MENU** button, then use the four-way control to select **Delete** (🗑️) and press the **SET** button.
- You can open the menu in full screen or in thumbnail.



3 Press ▲ or ▼ to select [ALL], and then press the **SET** button.

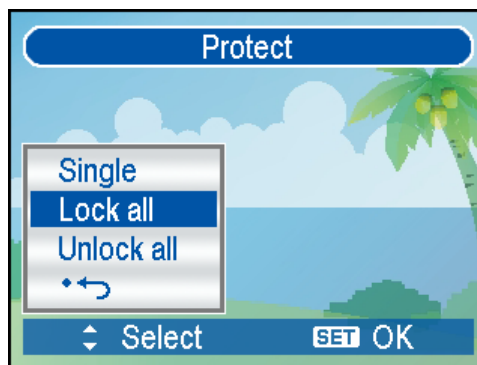
4 Press the **SET** button to delete all unprotected images.

Protecting a Single File

- 1
Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).
- 2
Open the menu.
 - Press the **MENU** button, then use the four-way control to select **Protect** (⊙Π) and press the **SET** button.
- 3
Press ▲ or ▼ to select **[SINGLE]**, and then press the **SET** button.
- 4
Press ◀ or ▶ to select the image you want to protect.
- 5
Press the **SET** button to protect the image.
 - When the file is locked, the ⊙Π displays on the LCD monitor.
 - Repeat step 4~5 to protect images.
 - To unlock the file, press the **SET** button again in step 5. The ⊙Π will disappear and the file is unlocked.

Protecting All Files

- 1
Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).
- 2
Open the menu.
 - Press the **MENU** button, then use the four-way control to select **Protect** (⊙Π) and press the **SET** button.
 - You can open the menu in full screen or in thumbnail.
- 3
Press ▲ or ▼ to select **[Lock all]**, and then press the **SET** button.
 - To unlock all files, select **[Unlock all]** in this step, then press the **SET** button.
- 4
Press the **SET** button to protect all images.



Protecting Multiple Files

1
Turn the power on, and set the camera to the thumbnail screen (☞ page 34).

2
Open the menu.

- Press the **MENU** button, then Press ◀ or ▶ to select to select **Protect** (⓪π) and press the **SET** button.



3
Press ▲ or ▼ to select [Select], and then press the **SET** button.

- The frame of the selected image turns green.

4
Select multiple images.

- Use the four-way control to select the image.
- Press the **SET** button toggles the ⓪π on and off. Repeat this step until all images that you want to protect are displayed with an icon ⓪π.

5
Protect images.

- Press the **MENU** button, then select [Yes] and press the **SET** button. All selected images will be protected.
- To cancel protect, press the **MENU** button in this step.

Editing Images

Rotating Still Images

1

Turn the power on, and set the camera to the **PLAYBACK** mode (👉 page 13).

2

Press ◀ or ▶ to select the image you want to rotate.

3

Open the menu.

- Press the **MENU** button, then use the four-way control to select **Rotate** (🔄) and press the **SET** button.

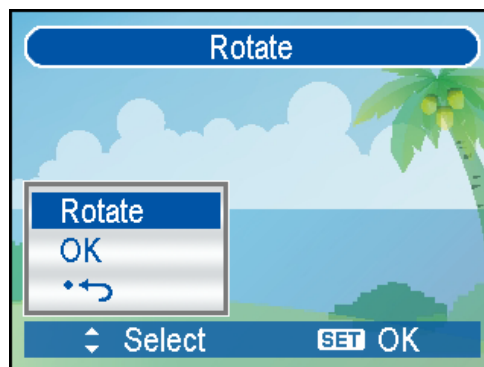
4

Press the **SET** button to rotate the image.

- Each press rotates the image 90 degrees in clockwise.

5

Press ▲ or ▼ to select **OK**, and then press the **SET** button to finish rotating.



Changing the Image Size

1

Turn the power on, and set the camera to the **PLAYBACK** mode (👉 page 13).

2

Press ◀ or ▶ to select the image you want to resize.

3

Open the menu.

- Press the **MENU** button, then use the four-way control to select **Resize** (📐) and press the **SET** button.

4

Press ▲ or ▼ to select an option, and then press the **SET** button.

- The resized image will be saved as a new file.



Caution

- Only a large size image can be resize to a smaller one.

Changing the Image with Effects

1

.....

Turn the power on, and set the camera to the **PLAYBACK** mode
( page 13).

2


.....

Press ◀ or ▶ to select the image you want to add the effect.

3

.....

Open the menu.

- Press the **MENU** button, then use the four-way control to select **Effect**
() and press the **SET** button.

4

.....

Press ▲ or ▼ to select an option, and then press the **SET** button.

- The edited image will be saved as a new file.

Copying the Files

You may copy the data from the camera's internal memory to the memory card for convenience.

1

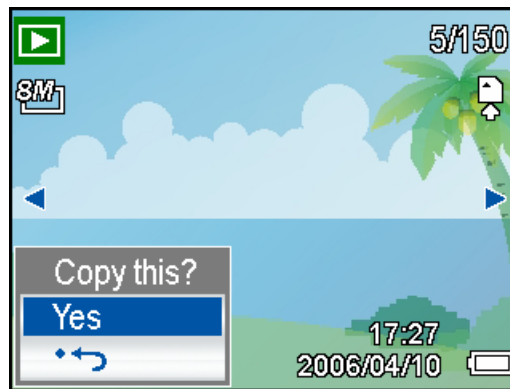
Be sure you have inserted a memory card into your digital camera. Set the camera to the **PLAYBACK** mode. (☞ page 13).

2

Open the menu.

- Press the **MENU** button, then use the four-way control to select

Copy to card (🔗) and press the **SET** button.



3

Press ▲ or ▼ to select **[Single]**, then press the **SET** button.

- To copy all images to a memory card, select **[All]**.

4

Press ◀ or ▶ to select the image you want to copy to a card.

5

Select **[Yes]** and then press the **SET** button to start copy.

- Repeat step 4~5 to copy other images.
- Press the **MENU** button to complete the setting.

Setting the DPOF

The Digital Print Order Format (DPOF) setting allows you to select images on the memory card for printing and specify the number of print copies in advance using the camera. This is extremely convenient for sending the images to a photo developing service or for printing on a direct print function compatible printer.

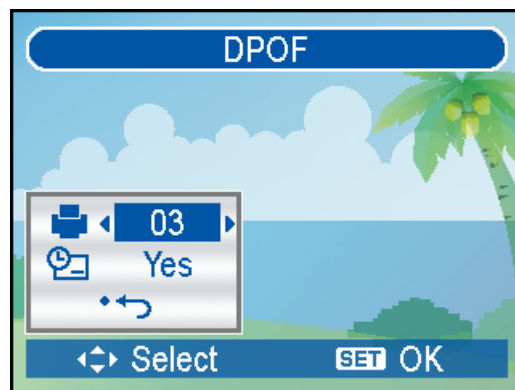
1

Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).

2

Open the menu.

- Press the **MENU** button, then use the four-way control to select **DPOF** (☞) and press the **SET** button.



3

Press ▲ or ▼ to select **[Single]**, then press the **SET** button.

- To set the DPOF setting for all images, select **[All]** in this step.
- To reset all DPOF settings to initial default, select **[Reset]** in this step.

4

Press ◀ or ▶ to select the image you want to print out, then press the **SET** button.

5

Set the number of copies.

- Press ◀ or ▶ to specify the number of copies.
- The number of copies can be set from 0 to 30.
- To cancel this image DPOF setting, set the number of copies to 0.

6

Print the date stamp out.

- Press ▼ and then press ◀ or ▶ to set or cancel the date stamp of current image.
- Repeat step 4~6 to other images for printing.

7

Press ▼ and then press the **SET** button to apply the setting or press the **MENU** button to cancel.

8

After you finished all image settings, select [↶] and press the **SET** button to apply it.

Choosing a Startup Image

1

Turn the power on, and set the camera to the **PLAYBACK** mode (☞ page 13).

2

Open the menu.

- Press the **MENU** button, then use the four-way control to select **S.Image** (☞) and press the **SET** button.

3

Press ◀ or ▶ to select the image you want, then press the **SET** button to apply the choice.

- A message “Completed” appears.

4

Set the camera to the Setup Menu (☞ page 16).

5

Press ▲ or ▼ to select **S.Image** (☞) then press ▶ or the **SET** button.

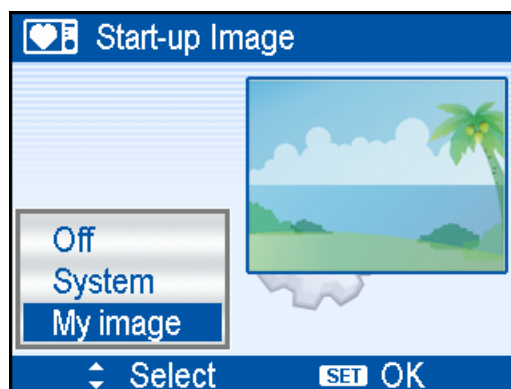
6

Press ▲ or ▼ to select a desired option and press the **SET** button to apply the setting.

[Off]: Disable the start-up image.

[System]: Use camera default image.

[My image]: Use the image that you just specified in step 3.



7

Press the **MENU** button to close the menu.



Caution

- The start-up image will not be deleted even if the original image is deleted or memory formatted.

Software Installation

System Requirements

Windows®

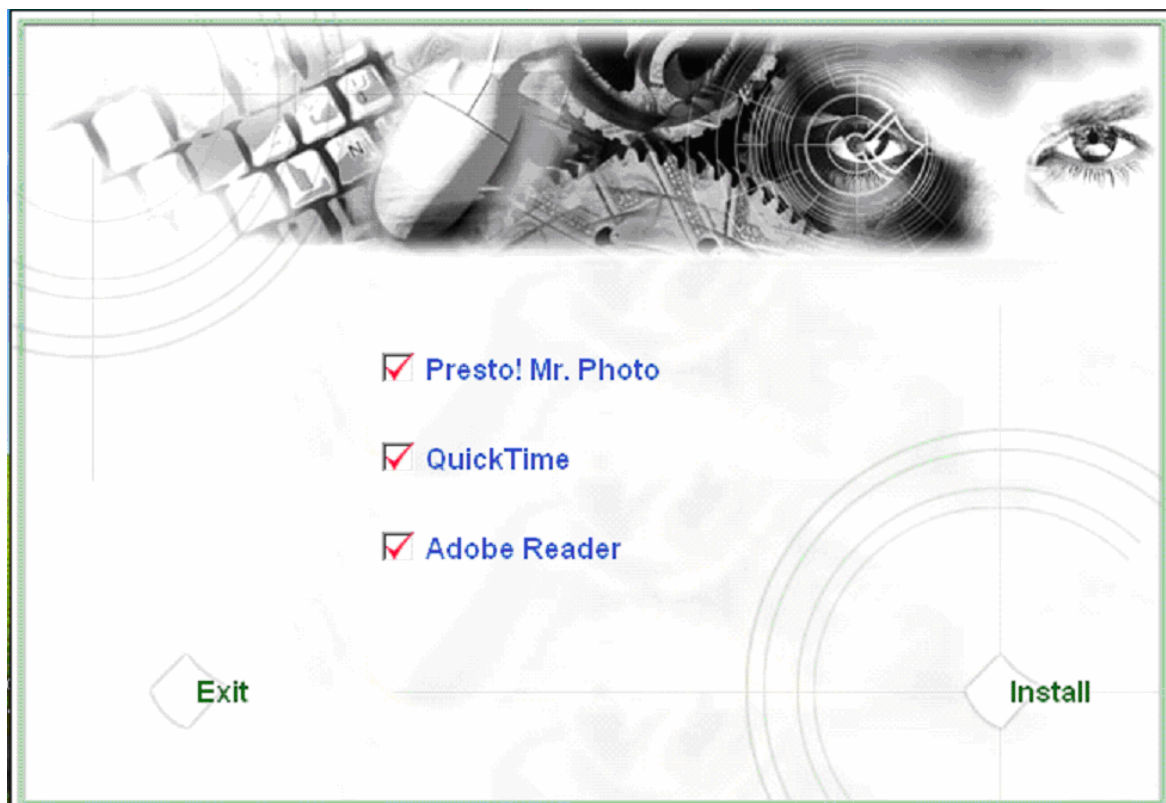
- PC with processor better than MMX™ Pentium® 233 MHz
- Windows® XP/2000/ME/98SE/98/Windows Vista™
- Minimum 32 MB RAM
- USB port
- CD-ROM drive
- 800x600 pixels, 16-bit colour display compatible monitor

Macintosh®

- Power Mac® G3 or later
- Mac OS® 9.0, 9.1, 9.2 and OS X
- Minimum 64 MB RAM
- USB port
- CD-ROM drive
- 800x600 pixels, 16-bit colour display compatible monitor

Installing the Software

The bundled software CD has the drivers and software that come with the camera. Insert the CD into your CD-ROM drive. The autorun menu appears:



The following software is listed:

- **Install Presto! Mr. Photo**
Install software for organizing and manages photos inside hard drive.
- **Install Quick Time**
Install Quick Time software allows you to playback a range of standard video and photo formats from the camera.
- **Adobe Reader**
Install the Adobe Acrobat Reader, which enables you to read documents in PDF format.



Tips

Click the items in the autorun menu to install the software.

- If the autorun menu does not appear automatically, open the CD-ROM in **[My Computer]** double-click the file named **[DSC Driver]** to start the program.

Installing the Software Driver

Windows 98 (Second Edition) requires the installation of the driver to use the camera has a mass storage device.

1

.....
Install the included software installation CD-Rom in your computer's CD-ROM drive.

2

.....
Open the CD-ROM in **[My Computer]** and use mouse right click on the program file named **[DSC Driver]** located in the CD-ROM.

3

.....
Follow the on-screen instructions to install the drivers.

Installing Presto! Mr. Photo

Presto! Mr. Photo Can simultaneously manage and show photos, movie clips, and sound. And adjust photo colour with its unique sound mode and intelligent editing mode to allow brilliant photo presentation on the software installation CD-ROM.

1

.....
Install the included software installation CD-Rom in your computer's CD-ROM drive. The autorun menu appears.

2

.....
Click [Installing Presto! Mr. Photo].

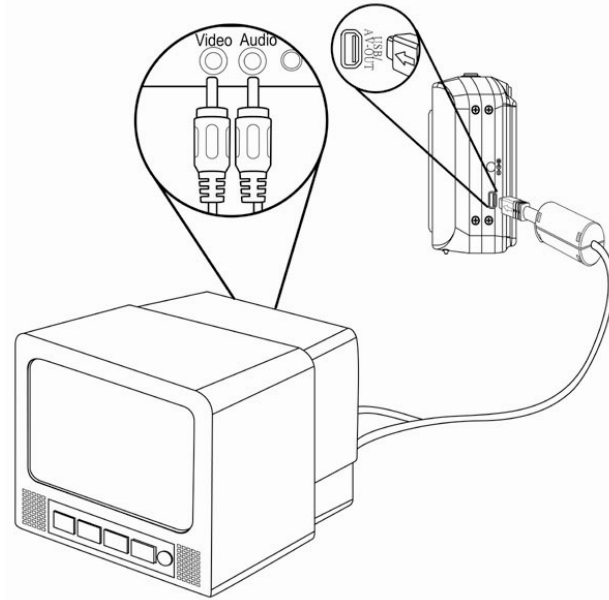
3

.....
Select a language and follow the on-screen instructions to install the drivers.

Making Connections

Connecting the Camera to a TV

You can display recorded images on a television with a supplied AV cable.



1
Set the TV out to match the TV system that you are using (👉 page 18).

2
Turn off the camera and the TV.

3
Use the supplied AV cable to connect the camera to the TV set.

4
Set the TV input signal to Video In.
• Refer to the documentation included with your TV for more information.

5
Display on TV.
• Everything that would normally appear on the camera's LCD screen, such as photo and video clip playback, slide shows, and image or video capture, appears on the TV.

Connecting the Camera to a PC

There are two ways to download files from the camera's internal memory or memory card to a computer:

- Inserting the memory card into a card reader
- Connecting the camera to a computer using the supplied USB cable

Using the Card Reader

1


Eject the memory card from the camera and insert it in a card reader that is connected to a computer.

2

Open [My Computer] or [Windows Explorer] and double-click the removable drive icon that represents the memory card.

3

Copy images from the card into a directory of your choice on the computer's hard disk.

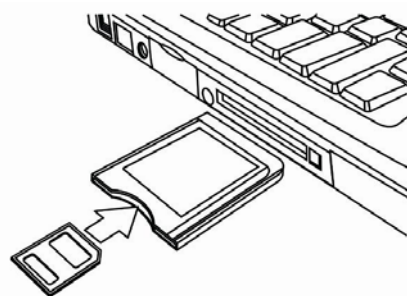

Connecting the Camera to a Computer with the USB Cable

1

Install the USB software driver included with the bundled CD-ROM.

2

Connect the supplied USB cable to the computer's USB port and turn on the camera.

- The LCD screen turns off when the connection to the computer has been successfully completed.

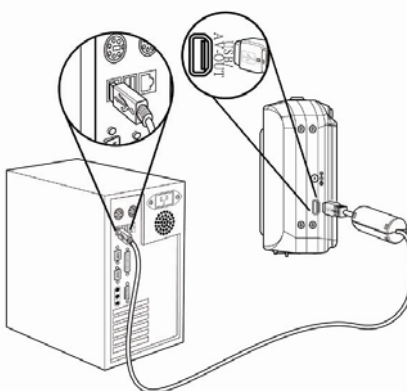
3

Open [My Computer] or [Windows Explorer]. A "Removable Disk" appears in the drive list.

4

Double-click the "Removable Disk" icon to view its contents.

- Files stored on camera are located in the folder name "DCIM".




Appendix

About the Folder & File Name

Your digital camera automatically creates a directory of folders in the internal memory or memory card that it uses to organize still images, movie clips and other information.

Folder Structure

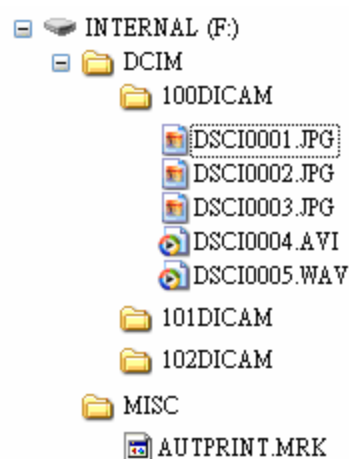Folder name begins with a 3-digit number from 100 to 999 and followed by “DICAM”, each folder holds up to 9999 files. If new files are made, a new folder named in sequence will be made automatically.



File Naming

File name begins with “DSCI” and are followed by a 4-digit number that increases in sequence. File numbering starts from 0001 when a new folder is created.

If the highest folder number is 999 and highest file number exceeds 9999, the camera will display the warning message “Folder cannot be created”. When it appears, try one of the following ways:

- Reset the file number and plug in a new memory card. (👉 page 17).
- The folder number and file number are initialized and renumbered from 100 and 0001 respectively. (👉 page 17).



Caution

- Do not change the folder and file names in the memory card using your computer. It may be unable to playback the data using the digital camera.

Formatting the Memory

To erase all data stored in the memory card if you are using a card, or all data stored in the internal memory if there is no card inserted.

1

.....

Turn the power on, and set the camera to the **REC** or **PLAYBACK** mode (👉 page 13).

2

.....

Press the **MENU** button to open the **REC** or **PLAYBACK** menu.

- The menu displays depends on whether you are in the REC mode or the PLAY- BACK mode.

3

.....

Open the **Setup** menu.

- Press four-way control to select **SETUP** (🔧) and then press the **SET** button to display the Setup menu.

4

.....

Press ▲ or ▼ to select **FORMAT** (🗑️) then press ► or the **SET** button.

5

.....

Press the **SET** button to start format, or press the **MENU** button to cancel it.

- A “BUSY...PLEASE WAIT” message displays and the memory card is starting format.
- A “COMPLETED” message displays when finish formatting.



Caution

- All data will be deleted including protected ones. Be sure to download important files to your computer before formatting.

Troubleshooting














Problem	Cause	Solution
Power does not turn on.	Battery is inserted in the wrong direction.	Reload battery in the correct direction.
	Batteries are dead.	Replace or recharge batteries.
	The battery compartment door is open.	Make sure the battery compartment door is securely closed.
The camera does not take pictures.	The flash is charging.	Wait for the flash to charge.
	Memory is full.	Insert a new memory card.
	Memory card is not formatted correctly.	The card may be defective, use a new card.
Image is not recorded when the shutter button is pressed.	The Flash is charge.	Wait for the flash to charge.
	Memory is full.	Insert a new memory card.
The flash does not fire.	Flash is set to OFF.	Set the flash to any mode except off.
Image is blurry or out of focus.	The camera was moving when the image was captured.	Hold the camera steady when shooting picture.
	The subject was beyond the range within which the camera can focus.	Turn the Macro modes on if the subject is within 15 cm (zoom out) or 40 cm (zoom in). Do not use Macro mode when shooting distant subjects.
Image is not displayed on the LCD monitor.	A memory card with non-DCIF images (recorded with other camera) is loaded.	This camera cannot display non-DCIF images.
Recorded images are not saved in memory.	The camera was turned off / powered down before the image was stored in memory.	If the battery low indicator appears on the LCD monitor, replace the battery immediately.
Cannot transfer images to a computer after connecting the USB cable.	USB driver is not installed.	Install the USB driver before you connect the camera to a computer / turn the camera on.
Card error	The memory card format may not be correct.	Re-format the memory card to the FAT format using a card reader in Windows.

Specifications

Sensor	8 Mega Pixels CCD, Size : 1/2.5 inch
Lens	Focal Length : f = 6.2 (W) ~ 18.6 (T) mm , 3X optical zoom, 4X digital zoom
LCD monitor	2.5" LCD monitor
Focus Range	Normal: 80cm ~ Infinity (from the tip of barrier) Macro: (W) 15 cm ~ 1 m / (T) 40 cm~ 1 m (from the tip of barrier)
Aperture	F/ 2.8 (W), 5.2 (T)
Shutter	8 ~ 1/2000 sec.
File Format	Still Image: EXIF 2.2 compatible format (JPEG compression), DCF compatible. Support DPOF, (PictBridge available) Video: AVI , Audio: WAV
Resolution	Still Image: 3264 x 2448 (8M) / 3264 x 2176 (3:2) / 3264 x 1840 (16:9) / 2816 x 2112 (6M) / 2272 x 1704 (4M) / 1600 x 1200 (2M) / 640x480 (VGA) , Video: 720x400 / 640x480 / 320x240
Scene Mode	Program /Movie / Voice REC / Sunset / Backlight / Q. Mode / Landscape / Portrait / Snow / Fireworks / Night scene / Kids / Food / Building / Text
Sensitivity	Auto / ISO 50 / ISO 100 / ISO 200 / ISO 400
White Balance	Auto / Daylight / Cloudy / Tungsten / Fluorescent (H) / Fluorescent (L) / Custom
Exposure Control	-2EV to +2EV in 1/3 step
Metering	Center-weighted / Multi / Spot
Burst	Depends on the capacity of the memory. (no limit)
Self-timer	2 sec. / 10 sec. / Double
Flash	Auto / Red eye reduction / Always on / Slow sync / Always off
Photo Effect	Black & White / Sepia / Negative / Mosaic / Red / Green / Blue
Storage	16 MB internal memory / SD Card
TV system	NTSC / PAL
Power Supply	AA rechargeable Ni-MH battery X2 (option) AA alkaline battery X2
Ambient temperature	Operating: 0° C to 40° C Storage: -20 to 60° C
Microphone	Built-in
Speaker	Built-in
Dimension	Camera Body (W x H x T) : 89.5 x 61.3 x 27 mm
Weight	Camera Body w/o battery : Approx. 120 (g)


*These specifications are subject to change without notice.

Function Available List

Mode Function			Still Capture															
																		
Shutter & Lens	Focus	One time AF	●	●	×	●	×	●	●	×	●	×	×	●	●	●	×	
		Continuous AF	×	×	×	×	×	×	×	×	●	●	×	×	×	×		
		Infinity Fixed	×	×	●	×	●	×	×	●	×	×	×	×	×	×	×	
	Shutter Speed		8~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	2 sec. fixed.	8~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	1/15~ 1/2000	×	
Button	Macro	Off	●	●	●	●	●	●	●	●	●	●	○	●	×	●	×	
		On	○	○	×	×	×	×	×	×	×	×	●	×	●	○	×	
	Flash	Auto	✓	○	×	×	×	×	●	×	×	×	●	●	×	×	×	
		Red eye	○	○	×	×	×	●	×	×	×	●	×	×	×	×	×	
		Force on	○	○	×	●	×	×	×	×	×	×	×	×	×	×	×	
		Slow sync	○	○	×	×	×	×	×	×	●	×	×	×	×	×	×	
		Force off	○	○	●	○	●	○	○	●	○	○	○	○	○	●	×	×
MENU	Resolution	8M	✓	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		16:9	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		3:2	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		6M	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		4M	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		2M	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		VGA	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	Movie Size	16:9	×	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×
		640	×	×	×	×	×	×	×	×	×	×	×	×	×	×	✓	×
		320	×	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×
	Quality	S.Fine	○	●	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		Fine	✓	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		Normal	○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	Metering	Center	○	×	○	○	○	○	○	×	○	○	○	○	○	○	○	×
		Multi	✓	●	●	×	●	●	●	●	●	●	●	●	●	○	×	
		Spot	○	×	×	●	×	×	×	×	×	×	×	×	×	○	×	
	WB	Auto	✓	●	●	●	●	●	●	●	●	●	●	●	●	○	×	
		Daylight	○	×	×	×	×	×	×	×	×	×	×	×	×	○	×	
		Cloudy	○	×	×	×	×	×	×	×	×	×	×	×	×	○	×	
		Tungsten	○	×	×	×	×	×	×	×	×	×	×	×	×	○	×	
		Fluor_H	○	×	×	×	×	×	×	×	×	×	×	×	×	○	×	
Fluor_L		○	×	×	×	×	×	×	×	×	×	×	×	×	○	×		
Custom		○	×	×	×	×	×	×	×	×	×	×	×	×	○	×		

Function \ Mode		Still Capture														
ISO	Auto	✓	●	●	●	●	●	●	●	×	●	●	●	●	×	×
	50	○	×	×	×	×	×	×	×	●	×	×	×	×	×	×
	100	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	200	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	400	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Exposure	+0.3 ~ +2.0	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	0.0	✓	●	●	●	●	●	●	●	●	●	●	●	●	×	×
	-0.3 ~ -2.0	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Drive Mode (*)	Off	✓	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	2 sec.	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	10 sec.	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	Double	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	Burst	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
AEB	Off	●	●	●	●	●	●	●	●	●	●	●	●	●	×	×
	On	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Highlight	Off	●	●	●	●	●	●	●	●	●	●	●	●	●	×	×
		○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
		○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
		○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Sharpness	Hard	○	×	●	×	●	×	×	×	×	×	×	●	×	×	×
	Normal	✓	●	×	●	×	●	●	●	●	●	●	×	●	×	×
	Soft	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Effect	Off	●	●	●	●	●	●	●	●	●	●	●	●	●	×	×
	B&W	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
	Sepia	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
	Negative	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
	Red	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
	Green	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
	Blue	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
Date Stamp	Off	✓	×	○	○	○	○	○	○	○	○	○	○	○	×	×
	Date	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×
	Date & Time	○	●	○	○	○	○	○	○	○	○	○	○	○	×	×
Digital Zoom	Off	○	●	○	○	○	○	○	○	○	○	○	○	○	×	×
	On	✓	×	○	○	○	○	○	○	○	○	○	○	○	×	×

✓: Factory setting ● : Default ○ : Available ✕ : Not available.

 : Setting is retained even after mode switch or power off.

(*): Set to [OFF] after power off.